





# Flo Top Mount Clamp

DYN/013/C25


**1** Place clamp plate in position on worksurface

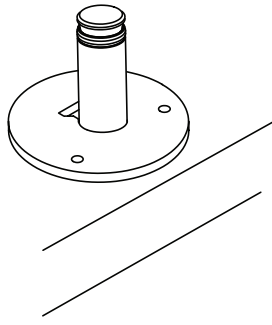



**2** Attach spacer pad to C-bracket in required orientation

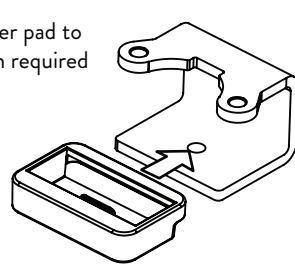

 **A** Facing up  
12-18mm surface thickness



  **B** Facing up  
19-25mm surface thickness



## WARNING

- Do not use this product for any purpose other than that for which it was designed
- Ensure desk/work surface is suitable to take the weight of the arm/s and monitors
- Supported weight must not exceed the maximum load per arm
- Take care when installing as fingers could become trapped

## MAINTENANCE AND INSPECTION


- Ensure all screws are tightened and occasionally adjust if needed
- Ensure arm is pushed fully down onto the clamp before installing the monitor(s)
- Clean with a damp cloth, NO solvents

## DISCLAIMERS

- The use of power tools, lever bars or excessive force during the installation, or re-configuration of the product will invalidate your guarantee
- Failure to observe the recommendations in the use, and configuration of these products may affect your guarantee


DYN-013-C25-INST-B APR2014

**3** Pass C-bracket and spacer around work surface. Ensure inside of bracket is flush against the work surface. Locate screws into clamp plate

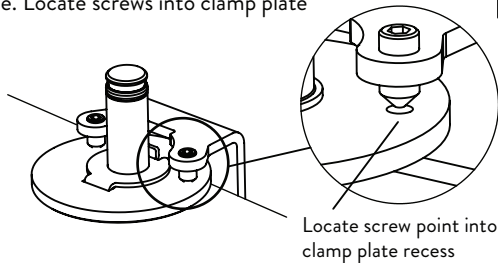


Locate screw point into clamp plate recess

**4** Tighten clamp screws

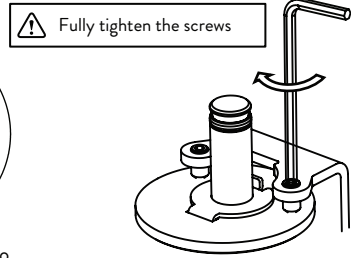


**5** Fit the bush and clamp cover

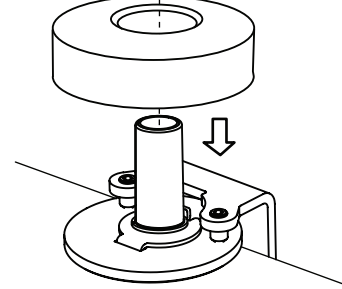


### Configuring the 180° stop function


The Flo top mount clamp features a 180° stop feature. Arm rotation can be limited by simply placing the stop feature in the positions shown

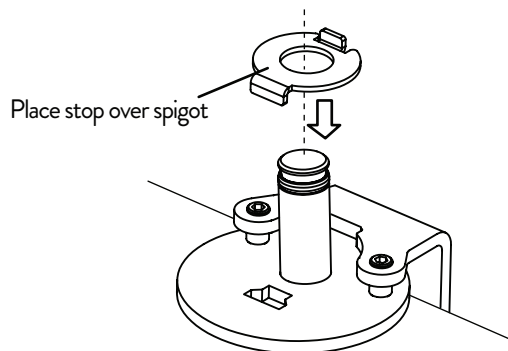


Place stop over spigot

 


360° rotation configuration

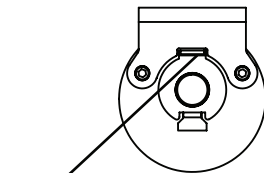

Tab sticking up

 

180° rotation configuration

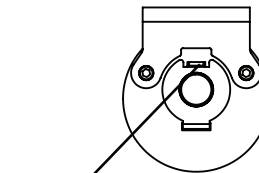

Tab sticking up